

信号方向	ヘッダコード	1局			2局			3局			4局				
		CH	bit	信号名称	CH	bit	信号名称	CH	bit	信号名称	CH	bit	信号名称		
リモート→マスタ	RD	リモート入出力	0000	00	RX00	0012	00	RX20	0024	00	RX40	0036	00	RX60	
				01	RX01		01	RX21		01	RX41		01	RX61	
				02	RX02		02	RX22		02	RX42		02	RX62	
				03	RX03		03	RX23		03	RX43		03	RX63	
				04	RX04		04	RX24		04	RX44		04	RX64	
				05	RX05		05	RX25		05	RX45		05	RX65	
				06	RX06		06	RX26		06	RX46		06	RX66	
				07	RX07		07	RX27		07	RX47		07	RX67	
				08	RX08		08	RX28		08	RX48		08	RX68	
				09	RX09		09	RX29		09	RX49		09	RX69	
				10	RX0A		10	RX2A		10	RX4A		10	RX6A	
				11	RX0B		11	RX2B		11	RX4B		11	RX6B	
				12	RX0C		12	RX2C		12	RX4C		12	RX6C	
				13	RX0D		13	RX2D		13	RX4D		13	RX6D	
				14	RX0E		14	RX2E		14	RX4E		14	RX6E	
		15	RX0F	15	RX2F	15	RX4F	15	RX6F						
		リモートマスタ	0001	00	RX10 予約	0013	00	RX30	0025	00	RX50	0037	00	RX70	
				01	RX11 予約		01	RX31		01	RX51		01	RX71	
				02	RX12 予約		02	RX32		02	RX52		02	RX72	
				03	RX13 予約		03	RX33		03	RX53		03	RX73	
04	RX14 予約			04	RX34		04	RX54		04	RX74				
05	RX15 予約			05	RX35		05	RX55		05	RX75				
06	RX16 予約			06	RX36		06	RX56		06	RX76				
07	RX17 予約			07	RX37		07	RX57		07	RX77				
08	RX18 インシャルデータ処理要求フラグ			08	RX38		08	RX58		08	RX78				
09	RX19 インシャルデータ設定完了フラグ			09	RX39		09	RX59		09	RX79				
10	RX1A エラー状態フラグ			10	RX3A		10	RX5A		10	RX7A				
11	RX1B リモートREADY			11	RX3B		11	RX5B		11	RX7B				
12	RX1C 予約			12	RX3C		12	RX5C		12	RX7C				
13	RX1D 予約			13	RX3D		13	RX5D		13	RX7D				
14	RX1E 予約			14	RX3E		14	RX5E		14	RX7E				
15	RX1F 予約	15	RX3F	15	RX5F	15	RX7F								
リモートマスタ	0002-0005	0002	00-15	RWr00	0014	00-15	RWr04	0026	00-15	RWr08	0038	00-15	RWr12		
		0003	00-15	RWr01	0015	00-15	RWr05	0027	00-15	RWr09	0039	00-15	RWr13		
		0004	00-15	RWr02	0016	00-15	RWr06	0028	00-15	RWr10	0040	00-15	RWr14		
		0005	00-15	RWr03	0017	00-15	RWr07	0029	00-15	RWr11	0041	00-15	RWr15		
マスタ→リモート	WD	リモート入出力	0006	00	RY00	0018	00	RY20	0030	00	RY40	0042	00	RY60	
				01	RY01		01	RY21		01	RY41		01	RY61	
				02	RY02		02	RY22		02	RY42		02	RY62	
				03	RY03		03	RY23		03	RY43		03	RY63	
				04	RY04		04	RY24		04	RY44		04	RY64	
				05	RY05		05	RY25		05	RY45		05	RY65	
				06	RY06		06	RY26		06	RY46		06	RY66	
				07	RY07		07	RY27		07	RY47		07	RY67	
				08	予約(ポート0入出力指定)		08	RY28		08	RY48		08	RY68	
				09	予約(ポート1入出力指定)		09	RY29		09	RY49		09	RY69	
				10	予約(ポート2入出力指定)		10	RY2A		10	RY4A		10	RY6A	
				11	予約(ポート3入出力指定)		11	RY2B		11	RY4B		11	RY6B	
				12	予約(ポート4入出力指定)		12	RY2C		12	RY4C		12	RY6C	
				13	予約(ポート5入出力指定)		13	RY2D		13	RY4D		13	RY6D	
				14	予約(ポート6入出力指定)		14	RY2E		14	RY4E		14	RY6E	
		15	予約(ポート7入出力指定)	15	RY2F	15	RY4F	15	RY6F						
		リモートマスタ	0007-0011	0007	00	RY10 予約	0019	00	RY30	0031	00	RY50	0043	00	RY70
				0008	01	RY11 予約		01	RY31		01	RY51		01	RY71
				0009	02	RY12 予約		02	RY32		02	RY52		02	RY72
				0010	03	RY13 予約		03	RY33		03	RY53		03	RY73
0011	04			RY14 予約	04	RY34		04	RY54		04	RY74			
	05	RY15 予約	05	RY35	05	RY55	05	RY75							
	06	RY16 予約	06	RY36	06	RY56	06	RY76							
	07	RY17 予約	07	RY37	07	RY57	07	RY77							
	08	RY18 インシャルデータ処理完了フラグ	08	RY38	08	RY58	08	RY78							
	09	RY19 インシャルデータ設定要求フラグ	09	RY39	09	RY59	09	RY79							
	10	RY1A エラーリセット要求フラグ	10	RY3A	10	RY5A	10	RY7A							
	11	RY1B 予約	11	RY3B	11	RY5B	11	RY7B							
	12	RY1C 予約	12	RY3C	12	RY5C	12	RY7C							
	13	RY1D 予約	13	RY3D	13	RY5D	13	RY7D							
	14	RY1E 予約	14	RY3E	14	RY5E	14	RY7E							
	15	RY1F 予約	15	RY3F	15	RY5F	15	RY7F							
リモートマスタ	0008-0011	0008	00-15	RWw00	0020	00-15	RWw04	0032	00-15	RWw08	0044	00-15	RWw12		
		0009	00-15	RWw01	0021	00-15	RWw05	0033	00-15	RWw09	0045	00-15	RWw13		
		0010	00-15	RWw02	0022	00-15	RWw06	0034	00-15	RWw10	0046	00-15	RWw14		
		0011	00-15	予約(ポートハードインターロック指定)	0023	00-15	RWw07	0035	00-15	RWw11	0047	00-15	RWw15		